 


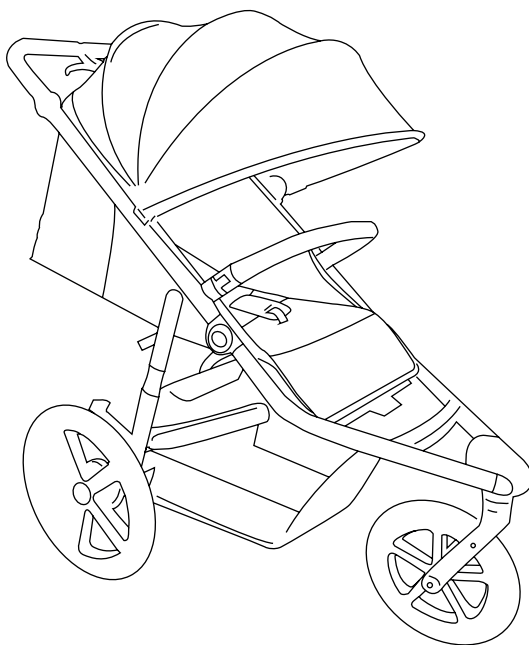

Bolt Jogger

User manual

Important: Read the following instructions carefully before use and keep them for future reference.

Important: Lire les instructions suivantes attentivement avec utilisation et les conserver pour les besoins ultérieurs de référence.

INDEX

Warnings (EN)	3
Waarschuwingen (NL)	5
Warnungs (DE)	7
Part list	9
Unfolding	10
Rear wheel assembly	11
Front wheel assembly	12
Front wheel swivel lock	13
Brakes	14
Installing/removing the bumper bar	15
Canopy adjustment	16
Seat recline	18
Harness	19
Folding	20
Tyre pump	21
Wrist strap	22
Install & remove car seat	23
Rain cover	25
Company info	26

WARNINGS

- Before using remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties etc.) and keep them out of reach of children.
- **WARNING!** This vehicle is intended for a child from 6 months and up to a maximum weight of 22 kg or the age of 4 years, whichever comes first.
- **WARNING!** Never use this stroller to carry more than one child at a time.
- **WARNING!** Never leave the child unattended.
- **WARNING!** Ensure that all locking devices are engaged before use.
- **WARNING!** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING!** Do not let your child play with this product.
- **WARNING! ALWAYS USE THE HARNESS RESTRAINT SYSTEM.**
- **WARNING!** Always use the crotch strap in combination with the waist belt section of the harness.
- **WARNING!** Use the most reclined position for new born babies.
- **WARNING!** Any load attached to the handle affects the stability of the stroller.
- **WARNING!** This product is not suitable for running or skating.
- **YOUR CHILD SAFETY IS YOUR RESPONSIBILITY.**
- Do not let children play with or hang on the stroller.
- Do not overload this stroller with additional children, goods or accessoires.
- Bags and other items should not be hung from the handle as this can affect the stability of the stroller.
- Overloading, incorrect folding and the use of non-approved accessoires is unsafe and may damage or break this stroller.
- Be certain that the stroller is fully opened, the safety latch is in position, and the wheel brakes are on before allowing children near the stroller.
- Never allow a child to step on the footrest to get into or out of the stroller.
- Avoid serious injury from the front wheel falling off. Ensure the wheel is properly installed and secure before any use of the stroller.
- Do not use parts of accessoires which are not approved by the manufacturer.
- Always apply the parking brake when the stroller is stationary.
- Ensure the parking brake is engaged during the loading and unloading of children.

WARNINGS

- Do not allow your child to climb into the stroller.
- Never leave a raincover, hood or apron on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- Be careful when going up or down kerbs.
- Remove your child and fold the stroller when going up or down escalators.
- If your stroller is used by someone unfamiliar with e.g. Grandparents, always show them how it works.
- Do not use this stroller near an open fire or exposed flame.
- Take care in windy conditions.
- To prevent damage, always remove the raincover before folding the stroller.
- Do not place anything on top of the raincover.
- To prevent your child overheating, always fold or remove a raincover when indoors or in warm environments.
- The maximum allowed weight for the back pocket of the canopy is 0,5kg.
- The maximum weight that can be carried in the storage basket is 4,5 kg. Excessive weight may result in a hazardous unstable condition.
- The total weight that can be placed in the in-seat pockets should be less than 1kg.
- This product conforms to EN 1888-2:2018 +A1:2022.

WAARSCHUWINGEN

- Verwijder vóór gebruik alle plastic zakken en andere verpakkingen (bijv. sluitingen, bevestigingsbandjes enz.) en gooi deze weg, en bewaar ze buiten het bereik van kinderen.
- **WAARSCHUWING!** Dit voertuig is bedoeld voor een kind vanaf 6 maanden en tot een maximumgewicht van 22 kg of de leeftijd van 4 jaar, afhankelijk van wat zich het eerst voordoet.
- **WAARSCHUWING!** Gebruik deze kinderwagen nooit om meer dan één kind tegelijk te vervoeren.
- **WAARSCHUWING!** Laat het kind nooit zonder toezicht achter.
- **WAARSCHUWING!** Zorg ervoor dat alle vergrendelingen vóór gebruik zijn vergrendeld.
- **WAARSCHUWING!** Om letsel te voorkomen, moet u ervoor zorgen dat uw kind uit de buurt blijft tijdens het uit- en opvouwen van dit product.
- **WAARSCHUWING!** Laat uw kind niet met dit product spelen.
- **WAARSCHUWING!** GEBRUIK ALTIJD HET DRAADBEVESTIGINGSSYSTEEM.
- **WAARSCHUWING!** Gebruik altijd de kruisband in combinatie met het heupgordelgedeelte van het harnas.
- **WAARSCHUWING!** Gebruik de meest liggende positie voor pasgeboren baby's.
- **WAARSCHUWING!** Elke lading die aan het handvat wordt bevestigd, heeft invloed op de stabiliteit van de kinderwagen.
- **WAARSCHUWING!** Dit product is niet geschikt voor hardlopen of skaten.
- **DE VEILIGHEID VAN UW KIND IS UW VERANTWOORDELIJKHEID.**
- Laat kinderen niet met de kinderwagen spelen of eraan hangen.
- Overlaad deze kinderwagen niet met extra kinderen, goederen of accessoires.
- Tassen en andere voorwerpen mogen niet aan het handvat worden gehangen, omdat dit de stabiliteit van de kinderwagen kan beïnvloeden.
- Overbelasting, verkeerd opvouwen en het gebruik van niet-goedgekeurde accessoires is onveilig en kan deze kinderwagen beschadigen of breken.
- Zorg ervoor dat de kinderwagen volledig geopend is, dat de veiligheidsgrendel op zijn plaats zit en dat de wielremmen ingeschakeld zijn voordat kinderen in de buurt van de kinderwagen komen.
- Laat een kind nooit op de voetsteun stappen om in of uit de kinderwagen te stappen.
- Voorkom ernstig letsel doordat het voorwiel eraf valt. Zorg ervoor dat het wiel correct is geïnstalleerd en veilig is voordat u de kinderwagen gebruikt.
- Gebruik geen onderdelen van accessoires die niet door de fabrikant zijn goedgekeurd.

WAARSCHUWINGEN

- Trek altijd de parkeerrem aan als de kinderwagen stilstaat.
- Zorg ervoor dat de parkeerrem ingeschakeld is tijdens het laden en lossen van kinderen.
- Laat uw kind niet in de kinderwagen klimmen.
- Laat nooit een regenhoes, capuchon of schort binnenshuis, in een warme atmosfeer of in de buurt van een warmtebron achter, omdat uw kind oververhit raakt.
- Wees voorzichtig bij het op- of afrijden van stoepranden.
- Verwijder uw kind en vouw de kinderwagen op wanneer u een roltrap op of af gaat.
- Als uw kinderwagen wordt gebruikt door iemand die niet bekend is met b.v. Grootouders, laat ze altijd zien hoe het werkt.
- Gebruik deze kinderwagen niet in de buurt van open vuur of open vuur.
- Wees voorzichtig bij winderige omstandigheden.
- Om schade te voorkomen, verwijder altijd de regenhoes voordat je de kinderwagen inklapt.
- Plaats niets op de regenhoes.
- Om te voorkomen dat uw kind oververhit raakt, vouwt of verwijdert u altijd een regenhoes als u binnenshuis of in een warme omgeving bent.
- Het maximaal toegestane gewicht voor de achterzak van de luifel is 0,5kg.
- Het maximale gewicht dat in de opbergmand gedragen kan worden is 4,5 kg. Overmatig gewicht kan leiden tot een gevaarlijke instabiele toestand.
- Het totale gewicht dat in de vakken in de stoel kan worden geplaatst, moet minder dan 1 kg bedragen.
- Dit product voldoet aan EN 1888-2:2018 +A1:2022.

WARNUNGS

 
- Entfernen und entsorgen Sie vor dem Gebrauch alle Plastiktüten und andere Verpackungen (z. B. Befestigungselemente, Befestigungsbänder usw.) und bewahren Sie diese außerhalb der Reichweite von Kindern auf.
- **WARNUNG!** Dieses Fahrzeug ist für ein Kind ab 6 Monaten und einem Maximalgewicht von 22 kg oder für ein Alter von 4 Jahren bestimmt, je nachdem, was zuerst eintritt.
- **WARNUNG!** Benutzen Sie diesen Kinderwagen niemals, um mehr als ein Kind gleichzeitig zu transportieren.
- **WARNUNG!** Lassen Sie das Kind niemals unbeaufsichtigt.
- **WARNUNG!** Stellen Sie vor der Verwendung sicher, dass alle Verriegelungsvorrichtungen eingerastet sind.
- **WARNUNG!** Um Verletzungen zu vermeiden, stellen Sie sicher, dass Ihr Kind beim Auf- und Zusammenklappen dieses Produkts ferngehalten wird.
- **WARNUNG!** Lassen Sie Ihr Kind nicht mit diesem Produkt spielen.
- **WARNUNG! VERWENDEN SIE IMMER DAS GURT-RÜCKHALTESYSTEM.**
- **WARNUNG!** Benutzen Sie den Schrittgurt immer in Kombination mit dem Hüftgurtteil des Gurtes.
- **WARNUNG!** Verwenden Sie für Neugeborene die am weitesten zurückgelehnte Position.
- **WARNUNG!** Jede am Griff befestigte Last beeinträchtigt die Stabilität des Kinderwagens.
- **WARNUNG!** Dieses Produkt ist nicht zum Laufen oder Skaten geeignet.
- Die Sicherheit Ihres Kindes liegt in Ihrer Verantwortung.
- Lassen Sie Kinder nicht mit dem Kinderwagen spielen oder daran hängen.
- Überladen Sie diesen Kinderwagen nicht mit weiteren Kindern, Gegenständen oder Zubehör.
- Taschen und andere Gegenstände sollten nicht am Griff aufgehängt werden, da dies die Stabilität des Kinderwagens beeinträchtigen kann.
- Überladung, falsches Zusammenklappen und die Verwendung von nicht zugelassenem Zubehör sind gefährlich und können zu Schäden oder Bruch dieses Kinderwagens führen.
- Stellen Sie sicher, dass der Kinderwagen vollständig geöffnet ist, die Sicherheitsverriegelung angebracht ist und die Radbremsen angezogen sind, bevor Sie Kinder in die Nähe des Kinderwagens lassen.

WARNUNGS


- Erlauben Sie einem Kind niemals, auf die Fußstütze zu treten, um in den Kinderwagen ein- oder auszustiegen.
- Vermeiden Sie schwere Verletzungen durch herunterfallendes Vorderrad. Stellen Sie sicher, dass das Rad ordnungsgemäß installiert und gesichert ist, bevor Sie den Kinderwagen verwenden.
- Verwenden Sie keine Zubehörteile, die nicht vom Hersteller zugelassen sind.
- Betätigen Sie immer die Feststellbremse, wenn der Kinderwagen stillsteht.
- Stellen Sie sicher, dass die Feststellbremse beim Be- und Entladen von Kindern angezogen ist.
- Erlauben Sie Ihrem Kind nicht, in den Kinderwagen zu klettern.
- Lassen Sie niemals einen Regenschutz, eine Kapuze oder eine Schürze drinnen, in heißer Atmosphäre oder in der Nähe einer Wärmequelle, da Ihr Kind sonst überhitzen könnte.
- Seien Sie vorsichtig, wenn Sie Bordsteine hinauf- oder hinunterfahren.
- Nehmen Sie Ihr Kind heraus und klappen Sie den Kinderwagen zusammen, wenn Sie Rolltreppen hinauf- oder hinunterfahren.
- Wenn Ihr Kinderwagen von jemandem benutzt wird, der nicht damit vertraut ist, z.B. Großeltern, zeigt ihnen immer, wie es geht.
- Benutzen Sie diesen Kinderwagen nicht in der Nähe von offenem Feuer oder offenen Flammen.
- Seien Sie vorsichtig bei windigen Bedingungen.
- Um Schäden zu vermeiden, entfernen Sie immer den Regenschutz, bevor Sie den Kinderwagen zusammenklappen.
- Stellen Sie nichts auf den Regenschutz.
- Um zu verhindern, dass Ihr Kind überhitzt, falten oder entfernen Sie immer einen Regenschutz, wenn Sie sich drinnen oder in warmen Umgebungen aufhalten.
- Das maximal zulässige Gewicht für die Rückentasche der Kabinenhaube beträgt 0,5 kg.
- Das maximale Gewicht, das im Aufbewahrungskorb transportiert werden kann, beträgt 4,5 kg. Übermäßiges Gewicht kann zu einem gefährlichen instabilen Zustand führen.
- Das Gesamtgewicht, das in den Sitztaschen verstaut werden kann, sollte weniger als 1 kg betragen.
- Dieses Produkt entspricht der Norm EN 1888-2:2018 +A1:2022.

PART LIST


Stroller x 1

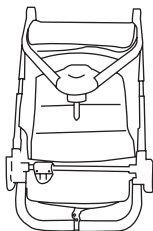

Front wheel x 1

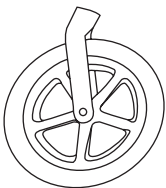 


Rear wheels x 2

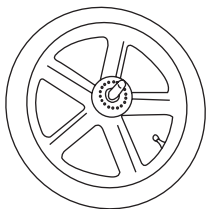


Bumper bar x 1



 Tyre pump x 1




Raincover x 1

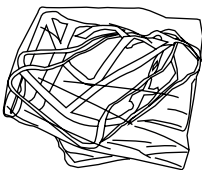

UNFOLDING

Unpack all contents and check that all parts are present before starting assembly. Please refer to the parts list.

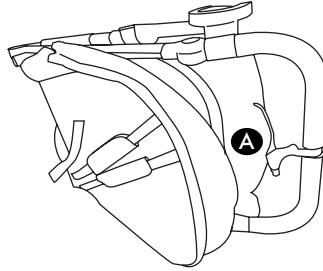

WARNING! Keep children away from stroller while unfolding.


1. Position the stroller (A) with the seat facing up and the handle bars closest to you.
2. If necessary, release the locking latch located on the lower right side by lifting the latch off the catch.
3. Pull up on the handlebar so that the stroller unfolds to its upright and locked position.
4. Ensure that the stroller is completely opened and the latching mechanism is secured before ANY further assembly or use of the stroller.

CAUTION: While unfolding the stroller, be careful to keep your fingers from being pinched by moving parts.

WARNING! ALWAYS keep children away from the stroller when unfolding.


REAR WHEEL ASSEMBLY

1. Take one rear wheel (C) and insert it into one of the rear wheel hubs until an audible “click” is heard.
NOTE: You may need to push the wheel with some force to get it past the locking mechanism.

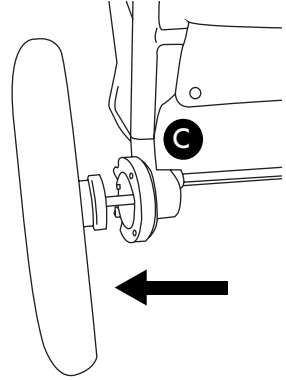

2. Pull outward on the wheel to ensure the wheel is installed properly.


3. To remove a rear wheel, push down on the plastic tab on the rear axle and then pull outward on the wheel.

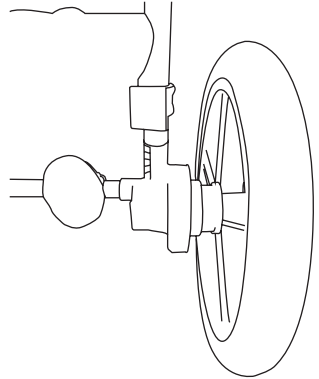


FRONT WHEEL ASSEMBLY

Slide front wheel into the front wheel post until it clicks in place. Pull on the wheel to ensure installed properly.

- To remove, press the metal release button on the back of the front wheel post and pull away from the stroller.

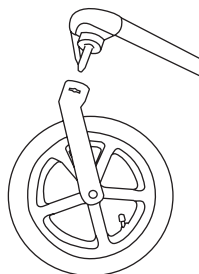

To set the front wheel to either lock or swivel mode, twist the ring near the top of the wheel to the desired mode.

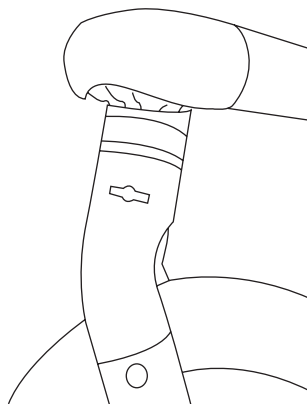


FRONT WHEEL SWIVEL LOCK

The stroller can be operated with the front wheel in either swivel mode or locked mode.

To set the front wheel to either lock or swivel mode, twist the ring near the top of the wheel to the desired mode.




The adjustable tracker allows wheel alignment fine-tuning.

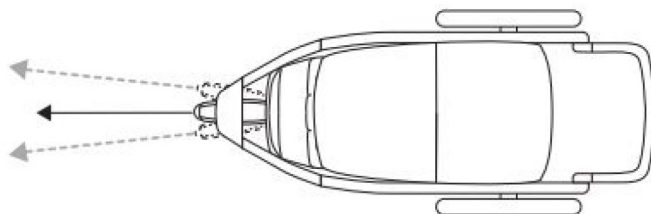

BRAKES

This stroller is equipped with a linked parking brake for the rear wheels.

1. Before placing your child into the stroller or removing them from the stroller, be certain that the rear parking brake is engaged.
2. To engage the rear parking brake, push down on the brake lever on the rear axle of the stroller until you hear an audible “click”.
3. Check that the brake is properly applied by attempting to push the stroller backwards and forwards.
4. To release the brake, lift up on the brake lever until it locks into the UP position and you hear an audible “click”.

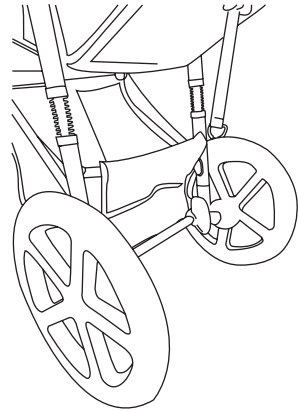


WARNING! Always engage the parking brake when the stroller is not being pushed so that it will not roll away.

WARNING! Never leave the stroller unattended, especially on a hill or incline, as the stroller may tip over or slide.

INSTALLING/REMOVING THE BUMPER BAR


- Remove the two safety caps from the seat mount points by pressing the release button and pulling each cap off.
- To attach the bumper bar, orient it with the male fitting pointed towards the seat. While holding the male fittings straight, insert the male fittings on the bumper bar into the female fittings located on both sides of the seat until it snaps into place. Pull outward on the bumper bar to ensure it is secure.
- To remove, press the buttons located on the underside of both male fittings inward and pull the bumper bar away from the seat.

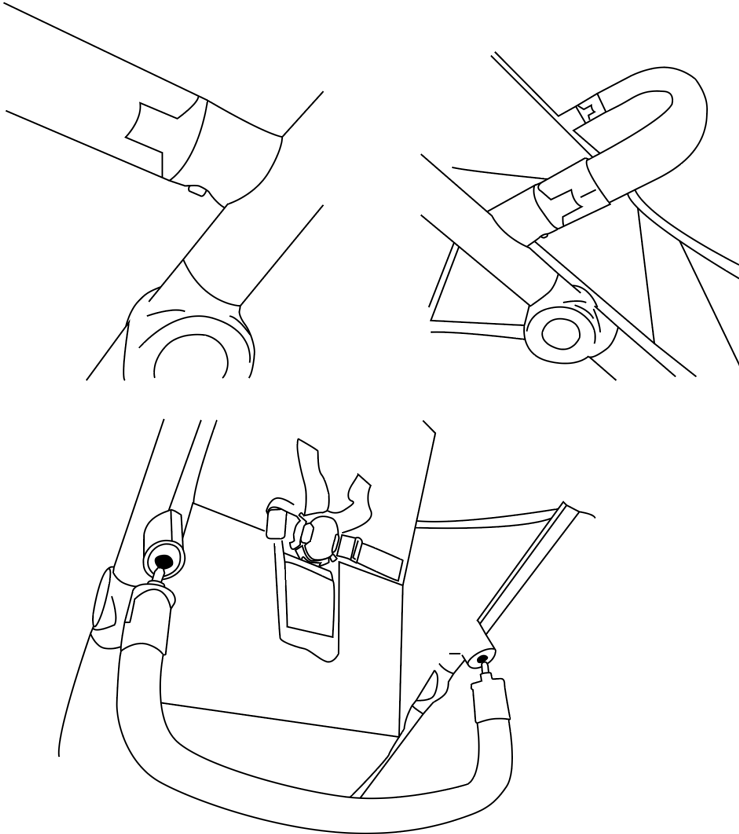

CANOPY ADJUSTMENT

1. To open the canopy, pull forward on the front edge of the canopy until it is fully extended.

The canopy and visor can be adjusted into several positions ranging from fully closed to full extended, or any position in between.

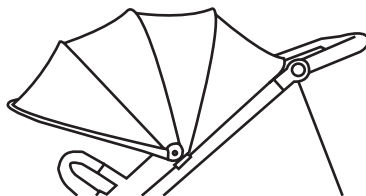


2. The top rear portion of the canopy has a roll back window.

To open, pull the front edge up, roll the flap backward and secure using.


3. To close the canopy, push the front edge of the canopy toward the rear of the stroller.

TIP: Push the seat back forward and tuck the canopy behind it

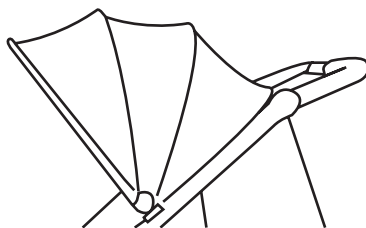


WARNING! Possible pinching hazard

- Be careful of the side hinges when opening and closing the canopy.

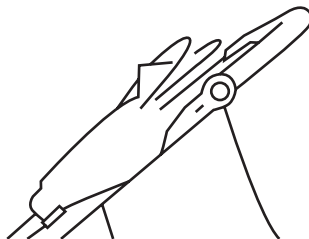

- Locate the sunshade extension for the canopy in the mesh pocket under the canopy.
- Detach the two snaps on the mesh pocket and remove the sunshade from the pocket.
- Zip the zipper all the way across the front of the canopy to attach it.
- Fully open the sunshade and attach BOTH snaps on the front of it to the snaps on the sides of the front wheel frame.
- When not use, detach the front snaps, unzip the zipper and store the sunshade in the mesh pocket.



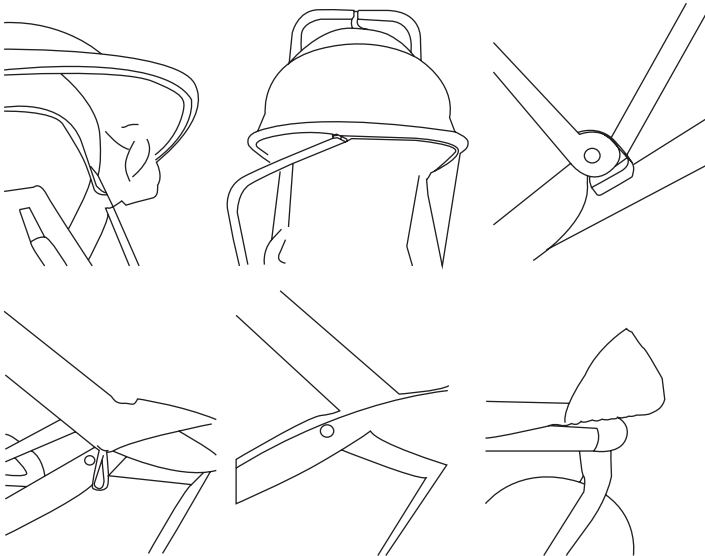


SEAT RECLINE

The seat can be adjusted to any position from upright to reclining.

All seat positions are for children 6 months and above **ONLY**.

1. To recline the seat, loosen the adjustment straps on both sides of the seat and recline the seat until the desired position is reached.
2. To adjust the seat back to a more upright position, simply tighten both adjustment straps until the seat back is in the desired position.

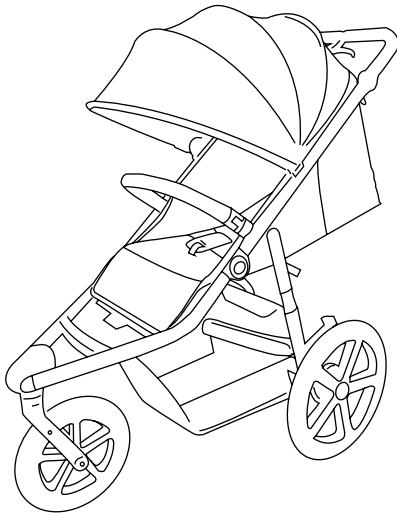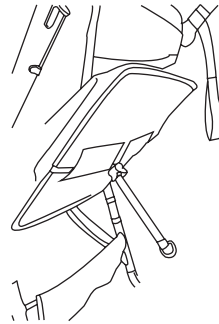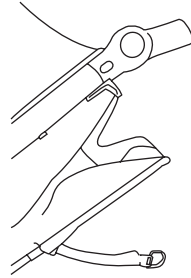

HARNESS

There are three height adjustment positions for the shoulder harness. Adjust the height to the closest height above your child's shoulders.

To remove the shoulder harness, at the rear of the seat turn the plastic ends sideways and push them through the slots in the seatback. Re-attach the harness at the proper height by reinserting the plastic ends through the slots. Ensure both straps are the same height.



Carefully place the child in the seat with the shoulder straps over their shoulders and chest. Then place the crotch strap between the child's legs.

To unlatch the buckle, press the buttons on both sides and remove the male ends of each side.

Combine the shoulder/waist buckles together, then place the crotch buckle on top of the combined buckles until all parts are in place.

WARNING! Always use the crotch strap in combination with the waist belt.




WARNING! Avoid serious injury from falling or sliding out. Always use the restraint system.

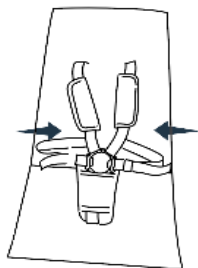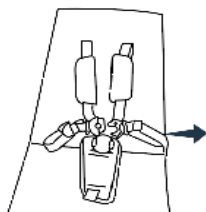

FOLDING

Folding the stroller

- Rear wheel brake lever **MUST** be engaged before folding the stroller.
- The stroller can be folded with the seat facing forward in the middle lower or rear higher position.
- Close the canopy if the seat is attached.
- Make sure the front wheels are in swivel mode and **NOT** locked.
- Press the button on the left side of the stroller, below the handle.
- Pull up on the triggers on both sides of the handle and slowly guide the handle down towards the rear wheels and safety latch. The stroller should automatically lock into place. **DO NOT** force the stroller closed.
- Pull up on the handle to ensure the safety latch is secure.

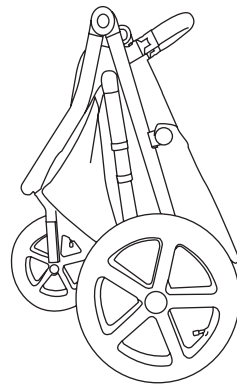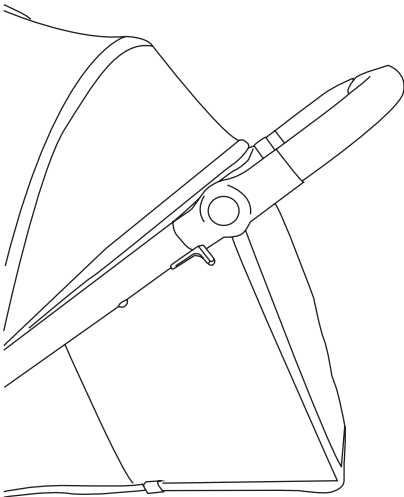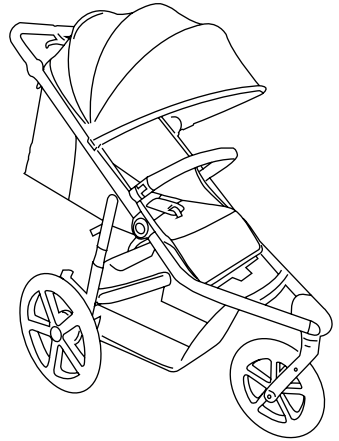

TYRE PUMP

The tyre pump is located inside the storage basket.

1: Remove protective cap from the tyre tube air valve. Attach air tube to the air valve on the tyre.



2. Place the head of the pump over the tire air valve and lift the lever to lock .

3. Use the pump to fill the deflated tire to the appropriate air pressure.

4. Unlock the pump, remove from the tire air valve and collapse to store in the basket.

5. Replace the cap to the tire air valve.



WARNING! DO NOT over inflate the tyres, as this may cause a potentially hazardous condition.


The pump may become warm to the touch, but this is not an abnormal condition.



WRIST TETHER STRAP

There is a tether strap located on the rear frame of the stroller to keep your stroller close by if you lose your grip.

Always loop the wrist tether around your wrist before using your stroller.

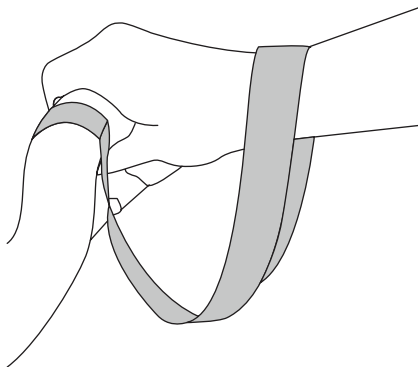

INSTALL & REMOVE CAR SEAT ADAPTER

SOLD SEPARATELY

Remove the bumper bar attachment.

Press the button and pull up the small part.



Install the car seat adapters on both side, pull both adapters to ensure is secure.



The car seat can only face backwards.

Hold the car seat by the carrying handle and lower the car seat onto the stroller so that the bracket on the car seat latches onto the car seat adapter. Pull up on the car seat to ensure it is secure.

To remove the car seat, press the release buttons on each side of the car seat and lift up.



Press the button and pull out the adapters.



RAIN COVER

SOLD SEPARATELY

Locate the raincover .

1 .Pull the raincover down over the canopy and tuck the rear section between the back of the canopy and the parent organiser.

2 .Fasten the velcro on the rear section of the raincover to the rear sides. Start near the handle and work your way down the sides.

3 .Fasten the velcro straps at the bottom of the raincover, to the frame below the footrest to secure.



COMPANY INFO

Company address

DERYAN B.V.
Marithaime 8
6662 WD Elst
The Netherlands

Telephone

+31 481 351 070

Email

team@deryan.com

Website

www.deryan.com