

248 mm

User manual

Sleeve Bottle Warmer



Important: Read the following instructions carefully before use and keep them for future reference.



Power Supply Modes

- **Built-in battery:** For use in environments such as traveling.
- **Mobile power supply (Power bank):** 5V=2A / 9V=2A.
- **Mobile phone power adapters:** 5V=2A / 9V=2A. For use in environments like home or hotels.
- **Vehicle charging:** For use during car journeys.

Security Considerations & Safety Matters

- Do not connect to a USB power supply exceeding the rated output (5V=2A/9V=2A), as it could lead to fire, excessive heat, or malfunction.
- Do not use if the product is malfunctioning or damaged.
- Do not heat when empty. Ensure there is at least 80ml of liquid in the bottle before using.
- Avoid dropping the product or subjecting it to excessive shock, as it may lead to injury, malfunction, or damage.
- Do not use detergents or corrosive liquids to wipe the product. Use a damp towel or paper towel to wipe it

- clean.
- Do not put the milk warmer directly into water for cleaning. Ensure the device and USB plug are completely dry before use.
- Use the product under adult supervision.
- Ensure the bottle fits tightly against the thermostat fabric head; otherwise, it cannot measure the temperature accurately.
- Ensure the bottle is placed inside before turning the heating on to avoid inaccurate temperature control and overheating. Check the temperature of the milk before feeding.


Prohibited Usage Scenarios

- Do not use near stoves, open flames, or other heating appliances.
- Do not use in direct sunlight or places with high temperatures, such as inside a hot car.
- Do not use near flammable organic solvents, gases, or humidifiers.
- Do not use in areas with heavy moisture, such as bathrooms, kitchens, or near washing machines.
- Do not place the product in a microwave oven or similar heating apparatus.

80 mm

Package Contains

- Rechargeable milk warmer
- Operation manual
- Charging cable (Type-C)

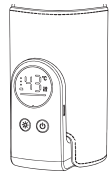

How to use


- **Power Key:**
- **Long press (1.5s):** Switch on/off.
- **Tap:** Temperature gear selection.

Night Light Button:

- **Tap:** Turn the night light on/off.

Display Control Panel:

- **Thermostatic Indicator:** Red light indicates heating. Green light indicates the set temperature is reached (keep warm).
- **Battery Indicator:** Yellow flashing means charging. Solid yellow light on the 3rd bar means fully charged.
- **Night Light Bar:** Turns on a warm-colored night light.
- **Temperature Gears:** 38°C, 40°C, 42°C, 45°C, 48°C, 50°C. After heating to the set temperature, the constant temperature indicator turns green.

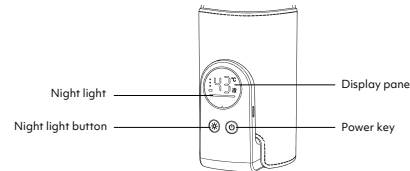

Company info

Company address

DERYAN
Marithaime 8
6662 WD Elst
The Netherlands

Telephone

+31481351070

Email

team@deryan.com

Website

www.deryan.com

80 mm